

ECLIPSE MACHINE ROOMLESS ELEVATOR Savaria.



A LUXURY STANDARD

The Savaria® Eclipse home elevator delivers luxury and convenience, with less space needed than traditional elevator designs. Requiring no machine room and minimal overhead drive space, the Eclipse elevator can be installed in new or existing homes. Using a modular rail system, the Eclipse design installs quickly and seamlessly.

With a smooth and stable ride, your Eclipse elevator can provide up to 6 stops over 50' (12.24 m)* of travel. You can configure your elevator for two openings to accommodate landings in your home, including a 90° exit.

Your Savaria Eclipse elevator is built with care using reliable components to provide you with dependable performance. A service panel can be conveniently located inside or outside the elevator shaft for ease of maintenance

Whether you need an elevator for mobility issues, or you are just looking for the ultimate home convenience, a Savaria elevator eliminates the





barrier of stairs, making it easier for everyone to enjoy your home.

*The Eclipse can be customized to 60' of travel in some jurisdictions, ask your Savaria dealer for details.

CUSTOMIZING YOUR SOLUTION

Your home environment is a reflection of your personal style. Rest assured that with the Savaria Eclipse, you can customize your elevator in the same way you customized your home. From construction configuration to accessories, you can create the perfect solution suited to your practical needs and to your design sense.

Choose from a range of interior cab styles and sizes for traditional or modern homes and everything in between. Select your finishes to complement and complete your solution. You will be able to create your own personal elevator from our wide selection of options, or even order your Eclipse to be finished on site by your own contractor.

CREATING A LIFETIME HOME

Adding a Savaria home elevator instantly provides the ultimate convenience for moving from floor to floor and it also makes your home barrier-free for years to come. Stay in your home comfortably, even if mobility issues face you or your loved ones in the future.



CHOOSE YOUR FINISHES

Elevator Cab Interiors

Choose from a selection of finished hardwood or unfinished veneer cabs in traditional species including oak, cherry and maple. We also offer high quality white MDF with a raised profile. Our standard elevator includes your choice of flat melamine or unfinished MDF.

- Hardwood
- Unfinished veneer
- White lacquered MDF
- Melamine
- See color chart for more details

Fixtures

Choose from stainless steel, anodized aluminum, anodized bronze or brass fixtures including cab operating panel, hall call stations and handrail.











SAVARIA ECLIPSE HOME ELEVATOR



Savaria Auto Slim Doors

Add convenience and an elegant, modern appearance to your Savaria Eclipse elevator with Savaria automatic slim doors. With their innovative design, the sill between the landing floor and the elevator cab is kept compact. Finish the doors in a choice of powder coated paint, or upgrade with stainless steel. You can even finish the inside and outside differently to match your décor.

Cab Gates

Three styles of accordion gates are available.



Clearfold



Panelfold



Visifold



From modern to traditional, your Savaria Eclipse home elevator can be created to reflect your style. Our glass auto slim doors pictured above are just one way to build personalized luxury.



In business for over 30 years, Savaria designs, engineers and manufactures products to help people gain personal mobility. We produce elevators – from basic to luxurious – for homes and select commercial applications. We also make a complete range of accessibility lifts for residential use and demanding commercial environments.

All of our products are made with the goal of helping people move – whether it's to improve mobility issues or to simply make life easier. By listening to each customer's unique needs, we're able to provide individualized solutions – whether it is for health reasons or just personal preferences.





Savaria employs over 400 people dedicated to the accessibility industry. While competitors have come and gone, Savaria has continued to build a strong portfolio of products that have been installed in thousands of locations throughout North America and other world markets. The company owns and operates full manufacturing facilities with research and development, engineering and technical support teams. A large network of authorized Savaria dealers provide expert installation and service. To locate a dealer near you, please contact Savaria.

STANDARD SPECIFICATIONS

- 750 lb or 950 lb capacity
- Running speed 40 ft/min
- Fully automatic operation
- 2 hp motor
- · Wide stable rail design
- Modular rail sections for quick install
- Energy efficient variable speed motor drive
- · Automatic cab on/off lighting
- Gate tucks flush, not obstructing entry
- Digital display in car operating panel
- · Home landing feature
- · White ceiling with four halogen pot lights
- MDF or melamine cab with six different color choices
- 36 month warranty on parts, ask dealer for details

SAFETY FEATURES

- · Battery emergency lowering and lighting
- · Manual lowering, hand crank
- · Motor brake
- · Lockable control panel
- Elevator door interlocks
- · Stop switch in car
- In-use indicator lights on hall stations
- Slack chain brake system

HOISTWAY SPECIFICATIONS

- · Minimum 6" pit standard
- · No special shaft ceiling construction required
- Ceiling height of 8' for standard cab

OPTIONS

- For added convenience and a modern appearance, add Savaria automatic slim doors (requires 84" cab)
- Up to 6 stops
- Maximum cab size 15 ft²
- 84" and 96" cab heights available
- 1000 lb capacity (where permitted)
- Machine room less controller in hoistway
- Alpha numeric button marking
- Digital display hall calls
- Power gate and power door operators
- · Two exit opening at one landing
- See color chart for details on finishes available

► Type 1 left hand sizes (right side available)

Car size	Width	Depth	Clear opening
36 x 48	50 ¹ / ₂ "	55"	36"
36 x 54	50 ¹ / ₂ "	61"	36"
36 x 60	50 ¹ / ₂ "	67"	36"
40 x 54	54 ¹ / ₂ "	61"	36"

Drawings and dimensions for reference only, not to be used for construction

► Type 2

Car size	Width	Depth	Clear opening
36 x 48	50 ¹ / ₂ "	55 ¹ / ₂ "	36"
36 x 54	50 ¹ / ₂ "	61 ¹ / ₂ "	36"
36 x 60	50 ¹ / ₂ "	67 ¹ / ₂ "	36"
40 x 54	54 ¹ / ₂ "	61 ¹ / ₂ "	36"

Drawings and dimensions for reference only, not to be used for construction

Width

Depth

Width

► Type 3

Car size	Width	Depth	Cle ope B	
36 x 48	52 ¹ / ₈ "	55"	36"	345/8"
36 x 54	52 ¹/ ₈ "	61"	36"	345/8"
36 x 60	52 ¹ / ₈ "	67"	36"	34 ⁵ /8"
40 x 54	56 ¹/ ₈ "	61"	36"	36"


Drawings and dimensions for reference only, not to be used for construction

Depth C

► Type 4

Car size	Width	Depth	Cle opei A	
36 x 48	52 ¹ / ₈ "	55"	345/8"	36"
36 x 54	52 ¹ / ₈ "	61"	345/8"	36"
36 x 60	52 ¹/ ₈ "	67"	345/8"	36"
40 x 54	56 ¹ / ₈ "	61"	36"	36"


Drawings and dimensions for reference only, not to be used for construction

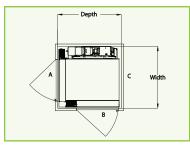

► Type 5 center (left and right available)

Car size	Width	Depth	Clear opening
36 x 48	52 ¹ / ₈ "	56 ¹/₄"	36"
36 x 54	52 ¹ / ₈ "	62 ¹/₄"	36"
36 x 60	52 ¹ / ₈ "	68 ¹/₄"	36"
40 x 54	56 ¹ / ₈ "	62 ¹/₄"	36"

Drawings and dimensions for reference only, not to be used for construction

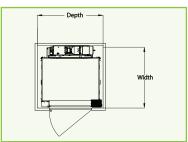

Authorized Savaria dealer:



www.savaria.com

2 Walker Drive, Brampton, ON L6T 5E1 Canada tel: 800.661.5112 fax: 905.791.2222